

Panasonic

Color CCTV Camera Operating Instructions

WV-CP480 WV-CP484

Model Nos.

RHP International Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use. www.Rock2000.com Toll Free: 1-888-919-2263 Outside the U.S.: +1-845-343-4077 Fax: +1-845-343-4299



SA 1965 The lightning flash with arrowhead symbol, which is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

SA 1966 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: To prevent fire or electric shock hazard, do not expose this appliance to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

LIMITATION OF LIABILITY

IN NO EVENT SHALL MATSUSHITA ELECTRIC INDUSTRIAL CO., LTD. BE LIABLE TO ANY PARTY OR ANY PERSON, EXCEPT FOR REPLACEMENT OR REASONABLE MAINTENANCE OF THE PRODUCT, FOR THE CASES, INCLUDING BUT NOT LIMITED TO BELOW: (1) ANY DAMAGE AND LOSS, INCLUDING WITHOUT LIMITATION, DIRECT OR INDIRECT, SPECIAL, CONSEQUENTIAL OR EXEMPLARY, ARISING OUT OF OR RELATING TO THE PRODUCT; (2) PERSONAL INJURY OR ANY DAMAGE CAUSED BY INAPPROPRIATE USE OR NEGLIGENCE OPERATION OF THE USER; (3) UNAUTHORIZED DISASSEMBLY, REPAIR OR MODIFICATION OF THE PRODUCT BY THE USER; (4) INCONVENIENCE OR ANY LOSS ARISING WHEN IMAGES ARE NOT DISPLAYED, DUE TO ANY REASON OR CAUSE INCLUDING ANY FAILURE OR PROBLEM OF THE PRODUCT; (5) ANY PROBLEM, CONSEQUENTIAL INCONVENIENCE, OR LOSS OR DAMAGE, ARISING OUT OF THE SYSTEM COMBINED BY THE DEVICES OF A THIRD PARTY; (6) ANY CLAIM OR ACTION FOR DAMAGES, BROUGHT BY ANY PERSON OR ORGANIZATION BEING PHOTOGRAPHIC SUBJECT, DUE TO VIOLATION OF PRIVACY WITH THE RESULT OF THAT SURVEILLANCE-CAMERA'S PICTURE, INCLUDING SAVED DATA, FOR SOME REASON, THAT BECOMES PUBLIC OR IS USED FOR THE PURPOSE OTHER THAN SURVEILLANCE;


PRECAUTIONS

- 1. Do not attempt to disassemble the camera. To prevent electric shock, do not remove screws or covers. There are no user-serviceable parts inside. Ask qualified service personnel for servicing.
2. Handle the camera with care. Do not abuse the camera. Avoid striking, shaking, etc. The camera could be damaged by improper handling or storage.
3. The installation should be made by qualified service personnel or system installers.
4. Do not use strong or abrasive detergents when cleaning the camera body. Use a dry cloth to clean the camera when dirty. When the dirt is hard to remove, use a mild detergent and wipe gently. Then wipe off the remaining detergent with a dry cloth.
5. Clean the CCD faceplate with care. Do not clean the CCD with strong or abrasive detergents. Use lens tissue or a cotton tipped applicator and ethanol.
6. Never face the camera towards the sun. Do not aim the camera at bright objects. Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise, blooming or smears may be caused.
7. Do not operate the camera beyond the specified temperature, humidity or power source ratings. Use the camera at temperatures within -10 °C to +50 °C (14 °F - 122 °F), and humidity below 90 %. The input power source is 120 V AC 60 Hz for WV-CP480 and 24 V AC 60 Hz/12 V DC for WV-CP484.
8. Avoid connections during a lightning storm. Otherwise, an electric shock may be caused.

FEATURES

Panasonic's WV-CP480 series cameras introduce a new level of high picture quality by use of Super-Dynamic 1/3 inch CCD and digital signal processing LSIs.
• Super Dynamic 128x with zone-free brightness detection
• High sensitivity: 0.08 lx in B/W mode, 0.6 lx in color mode (F1.4 Sens-up OFF)
• High resolution: 540 lines typical, 520 lines minimum
• Light control: ALC (DC/Video), ELC
• Terminals: Alarm output, Day/night sensor input
• Synchronization: VD2/LINE-LOCK/VBS/V5/INTERNAL

MAJOR OPERATING CONTROLS AND THEIR FUNCTIONS

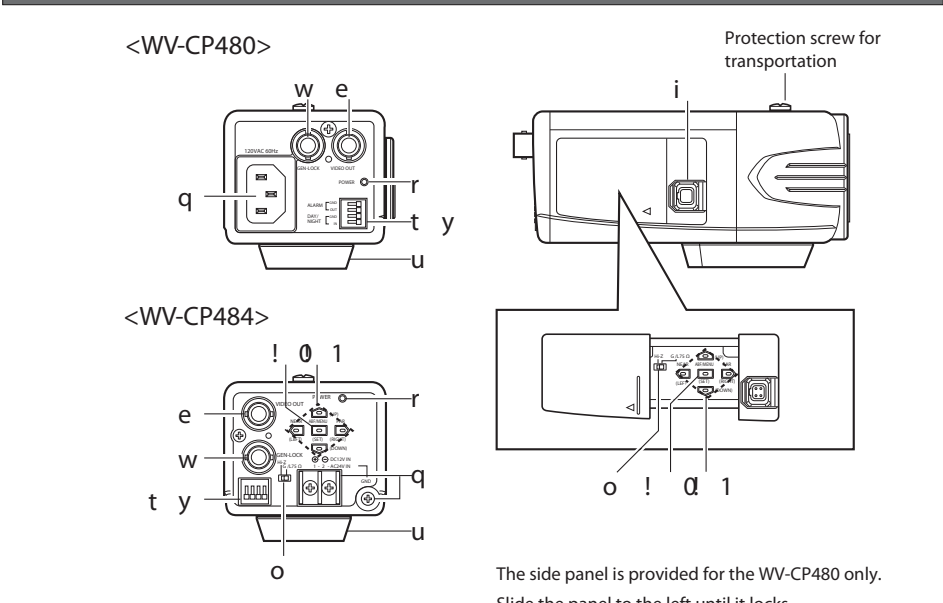


- q AC Inlet (120 VAC 60 Hz) <WV-CP480 only> Is connected by the supplied power cord.
q Power Input Terminal (DC 12 V IN, AC 24 V IN, GND) <WV-CP484 only> Receives 24 V AC or 12 V DC from the power supply.
w Gen-lock Input Connector (GEN-LOCK) Receives sync source signal from an external device.
e Video Output Connector (VIDEO OUT) Supplies the video output to the system devices.
r Power Indicator (POWER) Is lit when the power is supplied.
t Alarm Output Terminal (ALARM OUT/GND) Supplies the alarm output signal to the alarm input connector of an external device when the camera detects motion. (Open collector output: 16 V DC, 100 mA max.)
! Direction Buttons (LEFT) NEAR, (RIGHT) FAR, (UP), (DOWN) In the back-focus adjustment, the LEFT and RIGHT buttons are used for manual adjustment. Refer to ABOUT SETUP MENUS for setup operations.

INSTALLATION

Cautions:
1. The installation should be made by qualified service personnel or system installers.
2. The connections should comply with the National Electrical Code (NEC 725-51).
3. ONLY CONNECT THIS TO A 24 V AC CLASS 2 POWER SUPPLY. Be sure to connect the grounding lead to the GND terminal. (for WV-CP484)
4. To prevent fire or electric shock hazard, use a UL listed cable (WV-1, style 1007) for the Input Terminal. (for WV-CP484)
5. Do not use a transformer larger than 10 VA. (for WV-CP484)

Connections
Notes:
• Firmly connect the power cord.
• When the camera is mounted on a pan/tilt table, the power cord should be long enough. Otherwise, it may be unplugged from the camera.

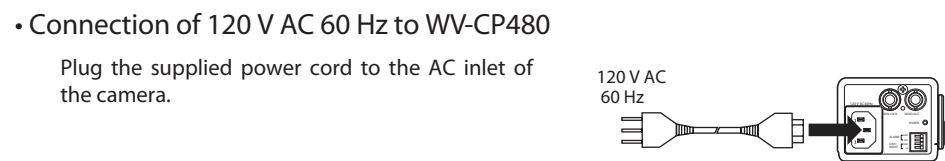

Connection of 12 V DC/24 V AC 60 Hz to WV-CP484
Use the formula below to calculate the power cable and power supply. The voltage supplied to the power terminals of the camera should be within 10.8 V DC and 16 V DC.

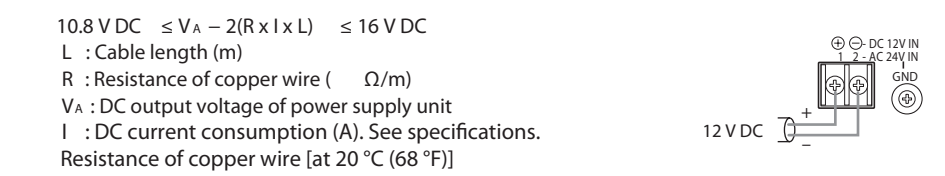


Table with 4 columns: Copper wire size (AWG), Length (m), Resistance (Ω/m), Resistance (Ω/ft). Rows for #24, #22, #20, #18.


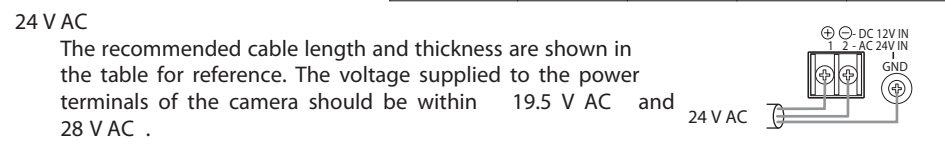


Table with 4 columns: Copper wire size (AWG), Length (m), Length (ft). Rows for #24, #22, #20, #18.


Video Cable Connections

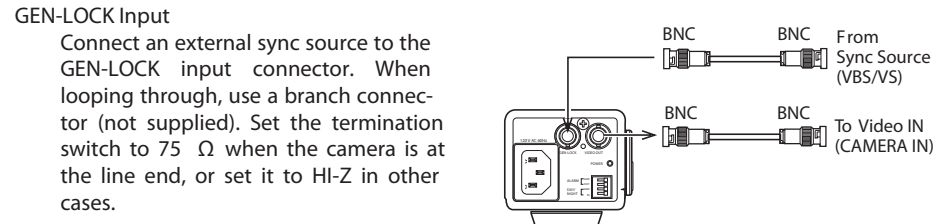

VIDEO OUT
Connect the video output connector to the monitor or other system device with the provided coaxial cable. The maximum extensible length is shown in the table.

Table with 4 columns: Type of coaxial cable, Recommended maximum cable length (m), Recommended maximum cable length (ft). Rows for RG-59/U, RG-6/U, RG-11/U, RG-15/U.

External Terminal Connections

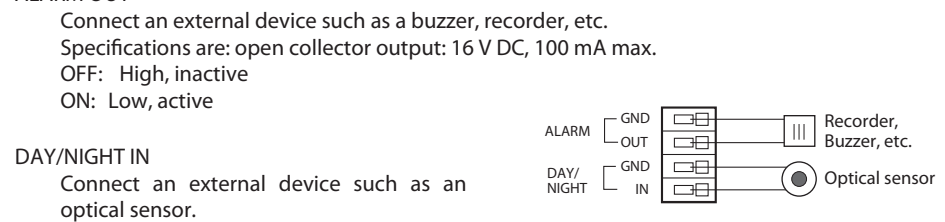


DAY/NIGHT IN
Connect an external device such as an optical sensor. Specifications are: pulled-up input: 5 V DC, 2 mA min. OFF: Open contact, inactive ON: Closed contact, active

- Notes:
• To validate the sensor inputs, select EXT for BW on the BW MODE menu.
• Use a relay unit if the voltage or current of the connected device exceeds the ratings.

Lens Mounting and Adjustment

Installation of Auto Iris Lens Connector
Install the supplied lens connector when using a video-driven ALC lens.
(1) Cut the iris control cable at the edge of the existing lens connector and process the cable end as shown in the figure.
(2) Solder the lens cable to the pins of the supplied connector. The pin assignment is as follows. Pin 1: Power source; +9 V DC, 50 mA max. Pin 2: Not used Pin 3: Video signal; 0.7 V (P-P)/40 k Ω Pin 4: Shield, ground

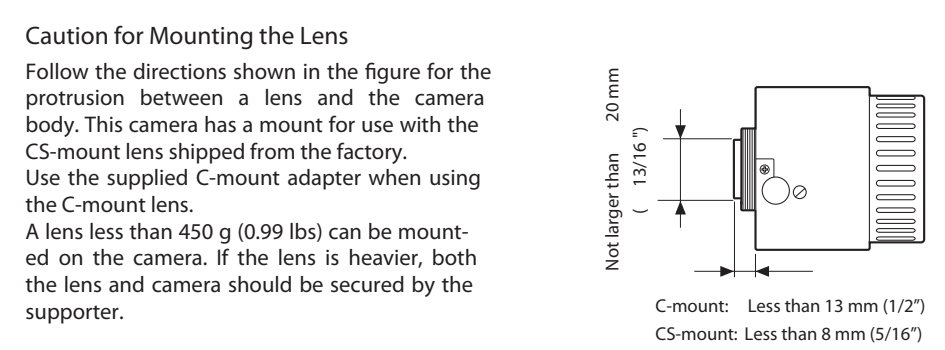

Mounting the Lens
1. Attach the supplied C-mount adapter when using a C-mount lens.
2. Mount the lens.
3. Connect the lens cable to the auto iris connector on the side of the camera.

Mounting the Camera

Mounting from the Top
Remove the mount adapter from the bottom of the camera by removing the two fixing screws. Attach the mount adapter to the top as shown in the figure, then mount the camera on the mounting bracket.

Flange-back (Back-focus) Adjustment

This adjustment is available only if SETUP-SW LOCK is set to OFF in the BACK-FOCUS SETUP menu.
1. Aim the camera at the targeting objects and if applicable adjust the zoom angle.
2. Press the SET button. A bar graph with "I" cursor and INDICATOR (4-digit number) will be overlaid on the camera picture. Back focus will be automatically adjusted.
3. If needed, perform manual adjustment using the L and R buttons to obtain the best focus on the targeted object while observing the picture. See INDICATOR for reference. The bar graph will disappear if no operation is performed for around 10 seconds. This adjustment can be also performed on the setup menu. Refer to 16. Back-focus Setting for details.

Important: Do not use the ABF function for continuous or repetitive purposes (ex. auto-focus etc.). This function is to be used to correct defocus caused by switching between color and black - and - white when/after installing the camera.

Hints

- Before Back-focus Adjustment
• Adjustment procedures vary depending on the lens. Refer to the instructions included with the lens.
• Reset the back-focus by pressing the L and R buttons simultaneously on the camera, and adjust the back-focus.
• Move the lens focus to the FAR-end when using a fixed-focal lens (lens focus adjustable type), and adjust the back-focus.
For Adjusting the Focus
• It is recommended that you lower the lighting for the object to be as dim as possible when adjusting the focus with an auto iris lens. This will make the iris open and will result in an accurate focus.
• Compared with cases under visible lights, using near-infrared lights may somewhat deviate the focus. It is recommended that you select AUTO or PRESET for CL /B/W in the BACK-FOCUS SETUP menu to obtain a proper focus for each of visible and near-infrared lights.
For Using General Vari-focal Lenses
• Aim at the objects 10 meters away or more when vari-focal lenses are used.
• For 8-fold and 10-fold class lenses, set the zoom to the WIDE-end and the focus to the FAR-end, and then adjust the back focus.
• For 2-fold and 3-fold class lenses, set the zoom to the TELE-end and the focus to the FAR-end, and then adjust the back focus.
• Confirm that the lens focus (not back focus) is adjustable over all of the zoom range especially at the TELE-end and WIDE-end.

ABOUT SETUP MENUS

Opening/Closing the Setup Menu

It is possible to open the WV-CP480 TOP menu by holding down the SET button for 2 seconds or more while displaying camera pictures. On the menu, you can check current settings and perform settings to meet requirements. To close the menu and return to camera picture, move the cursor to END and press the SET button. (When no operation is performed for 5 minutes, the menu will automatically close.)

How to Set Up on the Menu


Operate the direction buttons (U: Up, D: Down, L: Left, R: Right) and the SET button as shown in the table below. In the following pages, abbreviated expressions will be used many times for convenience. An abbreviated expression "Select CAMERA and press SET" means "Move the cursor to CAMERA by using the Up or Down button and press the SET button." Buttons of LEFT, UP, RIGHT, and DOWN are abbreviated as L, U, R, and D respectively.

Table with columns: Function/Button, Up(U), Down(D), Right(R), Left(L), Set(SET). Rows include: Open the menu, Move the cursor, Select a setup item, Apply settings, Open a sub-menu, Close the menu, Return to the previous menu, Return to the top menu, Reset a specific item, Reset all, Enable/Disable the menu, Scroll up/down the page.

- Notes:
• NA: Not Applicable.
• *1 "Reset all" is an irrevocable procedure that resets all settings to the default values. We recommend that you take note of settings before executing this command.
• *2 Before operating the menu, change SETUP DISABLE (default setting) to SETUP ENABLE.
• When closing the menu, the changed settings will be stored in the memory of the camera and will remain until the settings are overwritten by new ones.
• Use a system controller to operate setup menus after installation as necessary. Almost all operations will be available unless otherwise mentioned.

Top Menu and Sub Menus

The following menus will be displayed in the language selected on the LANGUAGE SETUP menu. There are four sub menus selectable on the top menu: CAMERA SETUP (2 pages), BACK-FOCUS SETUP, SPECIAL SETUP, and LANGUAGE SETUP. On these menus, select a setup item followed by " " and press the SET button to open more sub menus.

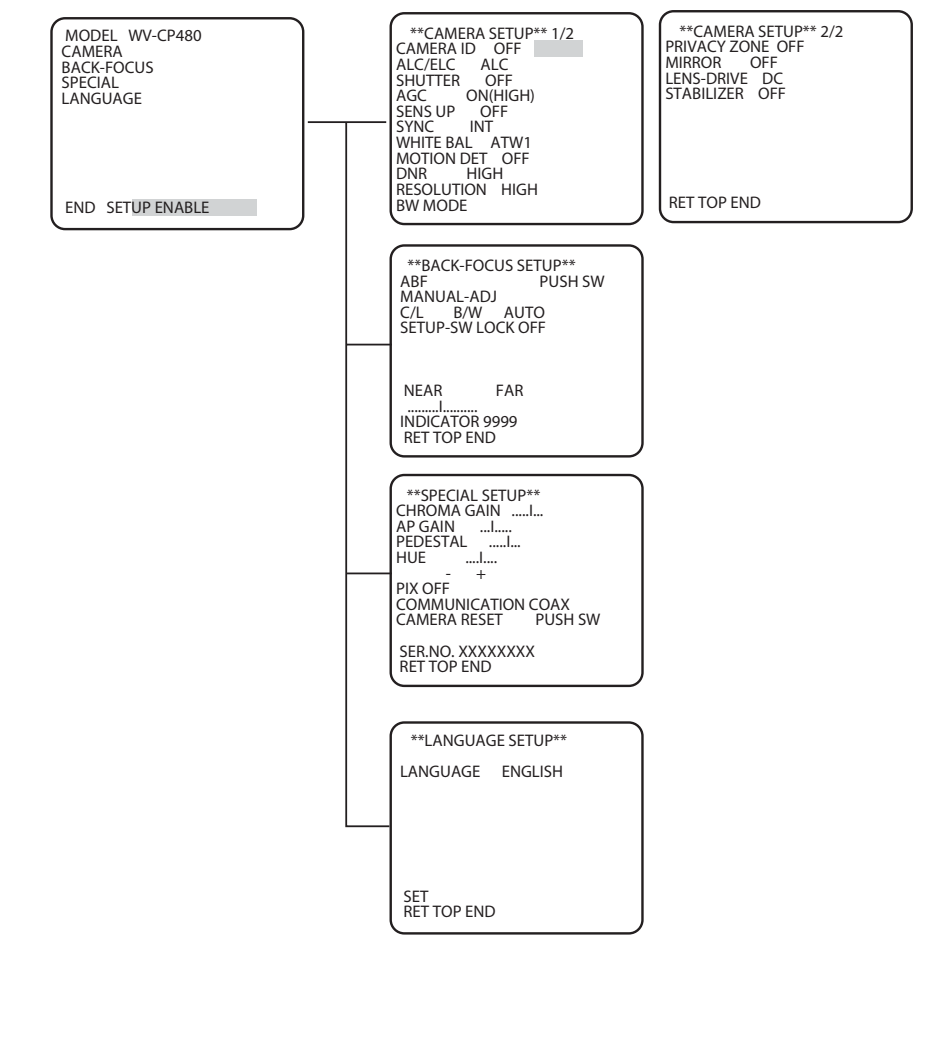

SETTING PROCEDURES

First, select a language for menu display and camera ID display.

Language Setup (LANGUAGE SETUP)

- 1. Select LANGUAGE on the top menu and press SET. The LANGUAGE SETUP menu opens.
2. Available languages: ENGLISH, FRANCAIS, DEUTSCH, ESPANOL, ITALIANO, RUSSIAN, JAPANESE, CHINESE
3. Select SET on the menu and press the SET button.

Camera Identification Setting (CAMERA ID)

Assign a name to the camera using up to 16 characters to display it overlaying on the camera picture in the selected position. Note: If you change the language selection after the assignment of camera ID, it will be erased.
1. On the CAMERA SETUP menu, select ON or OFF for CAMERA ID and press SET. ON : Displays entered camera ID. OFF : Does not display the ID. The CAMERA ID menu opens.

2. Select a character from the character area and press SET. The selected characters are displayed in the editing area.

3. Repeat these procedures until all characters are entered. To enter a blank space, select SPACE and press SET. To replace a specific character in the editing area:
1. Move the cursor to the editing area and then move the pointer to the character to be replaced pressing the L and R buttons.
2. Move the cursor to a candidate character in the character area and press SET.

To erase all characters of the camera ID, select RESET and press SET.


To specify the ID display position:
1. Select POSI and press SET. The entered camera ID will be highlighted on the screen.
2. Move it into the appropriate position and press SET. The position is determined and the screen will return to the CAMERA ID menu. Note: Keep pressing any of L/R/U/D for a second or more to move the camera ID faster as necessary.

Light Control Mode Setting (ALC/ELC)

Select a light control mode depending on the lens type mounted. The default setting is ALC. ALC : Is applicable to the auto iris lens. SUPER-D3 is available with this selection. ELC : Is applicable to the fixed or manual iris lens.

- Cautions:
1. Under bright lighting conditions such as outdoors, use an ALC lens because the ELC control range is not wide enough under these conditions.
2. Use an ALC type lens if the following phenomena occur:
• Strong smear and/or blooming on highlighted objects such as a spotlight or sunlight from windows.
• Noticeable flicker in the picture and/or color rendition variations.
3. If ELC is selected, SUPER-D3 and SHUTTER are not available and the white balance mode is automatically set to ATW1 or ATW2 locally per set.
4. If ELC is selected and a fixed iris lens is used, the focus depth becomes shallower than with the use of an ALC lens. Therefore, the range of focus-to-object distance becomes narrower.

2-1. ALC Mode with SUPER-D3 ON Super Dynamic 3 Function (SUPER-D3) in the SUPER-D3 mode, more photometric weight is given to the center of the screen than to the edge where a bright backlight would most likely be located.

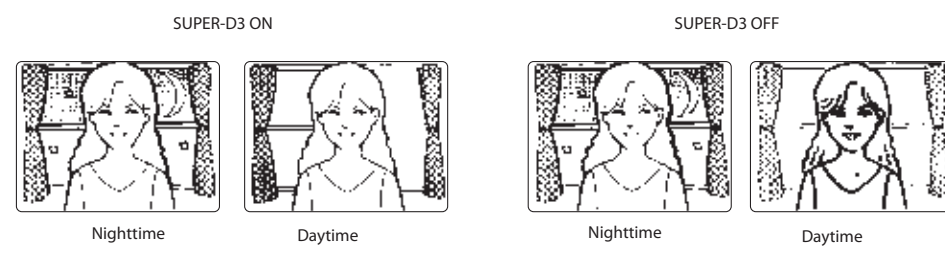

SUPER-D3 ON: Enables SUPER-D3 to compensate backlight automatically. SUPER-D3 OFF: Enables manual setting to compensate backlight.

- Notes:
• When set to ON, the available parameters for SHUTTER and SENS-UP will be limited as shown on the next page.
• Set SUPER-D3 to OFF when noise in a bright portion, flickerings, or color deterioration are observed.


- 1. Select ALC for ALC/ELC on the CAM SETUP menu and press SET. The ALC CONT menu opens.
2. Select ON for SUPER-D3.
3. Adjust the video output level (LEVEL) by moving the "I" cursor. It may be better to adjust LEVEL slightly higher.

(To be continued reverse page)


SETTING PROCEDURES

2-2. ALC Mode with SUPER-D3 OFF and ELC Mode


- Select ELC for ALC/ELC on the CAM SETUP menu or select OFF for SUPER-D3 on the ALC CONT menu.
→ MASK SET 1 appears on each of the ELC CONT and ALC CONT menu.

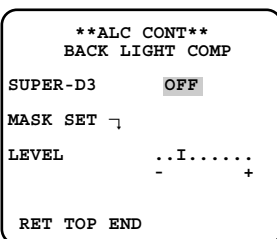

- Select MASK SET and press SET.
→ The 48 mask areas appear overlaid on the camera picture with the blinking cursor in the upper left corner.

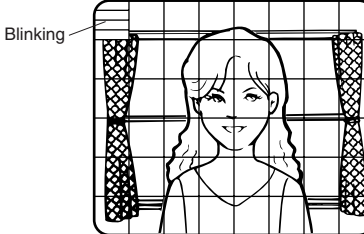

- Move the cursor to an area where the back-light is bright and press SET to mask the area.
→ The masked area appears alternately white and blinking when the cursor is on the area, or it turns white when the cursor is on other areas.

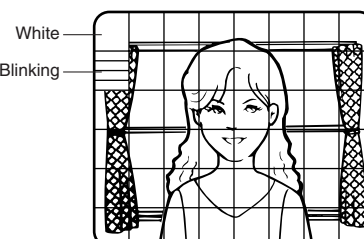

- To cancel masking, move the cursor to a masked area and press SET.
→ When masking of the area is cancelled, it changes from white to normal.
To cancel all the masking, press L and R simultaneously for 2 seconds.

- Repeat step 3 and 4 as necessary.


- Press SET for 2 seconds or more.
→ The ALC CONT menu appears.

- Adjust the video output level (LEVEL) by moving "I" cursor.

Note: If ON is selected for SUPER-D3, a shadow (black line) may appear at the boundary between the bright and the dim portions. This is a natural phenomenon and does not indicate trouble.

3. Shutter Speed Setting (SHUTTER)

Select a proper shutter speed when ALC is selected on the CAM SET UP menu. The default setting is OFF.



Note: This setting is not available when SUPER-D3 is set to ON.

4. Gain Control Setting (AGC)

Select an automatic gain control mode. This setting raises the gain and brightens the image under low light conditions. The default setting is ON (HIGH).

Available modes: ON (HIGH / high), ON (MID / medium), ON (LOW / low), OFF


5. Electronic Sensitivity Enhancement (SENS UP)

Select a proper enhancement rate when the camera is set to ALC mode.

The default setting is OFF.

AUTO: Sets AGC to ON and adaptively raises the sensitivity up to the selected amplification rate, for example 10 times when set to X10 AUTO.

FIX: Raises the sensitivity fixedly to the selected rate.
OFF: Does not raise the sensitivity.



Notes:

- Firstly select the SHUTTER speed and next select the SENS UP mode when 1/100 and AUTO are to be applied.
- There may be cases where some types of system controllers cannot operate some of the SENS UP functions. If this happens, use the direction buttons on the camera.
- When you select AUTO for SENS UP and ON for SUPER-D3, the SENS UP function has priority so that the SUPER-D3 function is not activated automatically.
- While the SENS UP function is selected, noise, spots or a whitish phenomenon may appear in the picture when the sensitivity of the camera is increased. This is a normal phenomenon.

6. Synchronization Setting (SYNC)

- Select a sync mode.

VD2: Multiplexed vertical drive, highest priority

LL: Line-Lock, follows the phase of supplied AC power, 2nd priority

EXT (VBS): Composite color video or black-burst sync, 3rd priority


EXT (VS): Composite monochrome video or composite HV sync, 4th priority

INT: Internal sync, lowest priority

Note: Selection is not available when VD2 is added to the camera. Selection from LL and VBS/VS is available when the respective sync is added.

- Line-Lock Vertical Phase Adjustment (V PHASE)

- Select LL and press SET
- Prepare a dual-trace oscilloscope and supply it with the video output of the camera to be adjusted and that of the reference camera.
- Set the oscilloscope to the vertical rate and expand the V-sync portion.
- Select a proper COARSE phase from 16 steps (22.5 degrees/step) that makes the two video signals on the oscilloscope the closest.
- Select a proper FINE phase so that the two video signals on the oscilloscope come as close as possible.

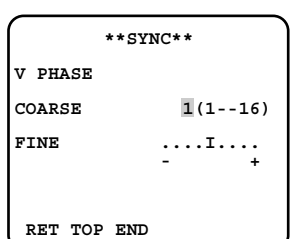


Notes:

- Moving the "I" cursor across the +/- end will shift the FINE range.
- Press L and R simultaneously to reset the V PHASE to the default (0 degree).
- Keep pressing L or R for a second to move the "I" cursor faster if necessary.
- Spike noise if contained in the AC mains may disturb synchronization of LL.

- VBS Phase Adjustment (H PHASE/ SC)

- Select INT for SYNC and press SET
- Supply a VBS (Composite color video or black-burst) signal to the GEN-LOCK IN terminal.
- INT will change to EXT (VBS).
- Select EXT (VBS) and press SET
- A sub menu displaying H PHASE and SC (Sub carrier) opens.

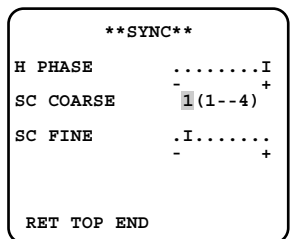

<H PHASE Adjustment>

- Prepare a dual-trace oscilloscope and supply it the video output of the camera to be adjusted and the VBS.
- Set the oscilloscope to the horizontal rate and expand the H-sync portion.
- Move the "I" cursor so that phase of the VBS and that of the camera match on the oscilloscope.


Adjustable range: From zero to - 2.0 microseconds

<SC (Sub-carrier) Phase Adjustment>

- Connect the camera to a special effect generator (SEG) and supply the output of the SEG to a monitor.
- Select a proper COARSE phase from 4 steps (90 degrees/step) while observing the original scene and the scene on the monitor to make these colors similar.
- Select a proper FINE phase so that these colors match as closely as possible.
- For more accurate adjustment, prepare a vectorscope and supply it with the camera signal to be adjusted and the output of the SEG as a reference signal. Adjust SC to match on the vectorscope.

- VS Phase Adjustment (H PHASE)

- Supply a VS (Composite monochrome video or composite HV) signal to the GEN-LOCK IN terminal.
- Adjust the H phase referring to <H PHASE Adjustments> described above.

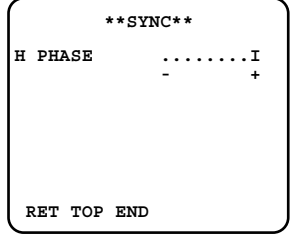

7. White Balance Setting (WHITE BAL)

Select a mode for WHITE BAL on the CAMERA SETUP menu. The default is ATW1.

ATW1: Is automatically adaptable to the color temperatures of 2 600K - 6 000K.

ATW2: Is automatically adaptable to the use of sodium lamps.

AWC: Is automatically adaptable to the color temperatures of 2 300K -10 000K.

Notes:

- When ATW1 or ATW2 is selected, no further operation is required.
- ATW1 and ATW2 do not appear on the setup menu of the system controller.
- Select AWC in the following cases: the color temperature is out of the 2600 - 6000K range, the scene contains mostly high color temperatures such as blue sky or sunset, or the scene is dim.


AWC Setting

- Select AWC and press L.
→ AWC will change to AWC → PUSH SW.
- Press SET.
→ PUSH SW will be highlighted while the AWC setting is performed.
- Press R.

Manual Fine Adjustment

Perform fine adjustment as necessary.

- Select WHITE BAL and press SET.
→ Fine adjustment menu of ATW or AWC will open.
- Adjust finely R (Red) and B (Blue) gain by moving the "I" cursor.

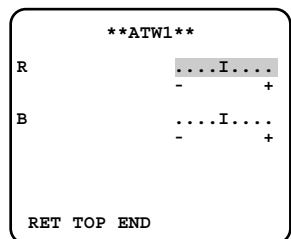

8. Motion Detection Setting (MOTION DET)

When a series of changes in pictures is detected, the camera outputs an alarm to the external device such as a disk recorder. The recorder will start recording the pictures.

- Select a mode for MOTION DET on the CAMERA SETUP menu.



The default setting is OFF.

OFF: Disables the alarm output.

MODE1: Outputs alarm when a series of motions is detected.

MODE2: Outputs alarm when a series of scene changes is detected.

→The MODE 1 menu opens when you select MODE1 and press SET .

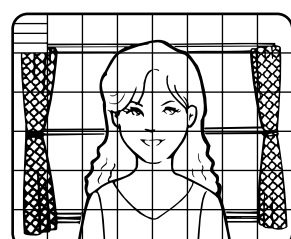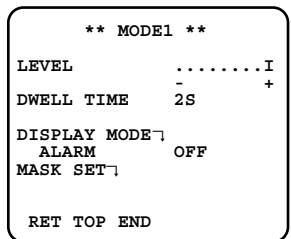

- Adjust for LEVEL to optimize the sensitivity of detection.

- Select a dwell time. The default is 2S.

Available time (second): 2, 5, 10, 30
The next detection will be performed after the set time elapses.

- Select MASK SET and press SET.

→ A 48-split screen opens.

Specify non-detection (mask) and detection areas in the same way as described earlier in 2.2 ELC Mode.

- Hold down SET for 2 seconds to return to the MOTION DET menu.

Note: Perform the setting of mask area after STABILIZER in the CAMERA SETUP menu is set to OFF.

- Select ON or OFF for ALARM under DISPLAY MODE.

ON: Blinks the respective areas in the DISPLAY MODE screen if a motion is detected.

OFF: Does not indicate motion detection in the DISPLAY MODE screen. This is applicable when WV-RM70, WV-CU550 series, WV-CU161 or WV-CU360 controller is used.

- Select DISPLAY MODE and press SET to see the current settings.

On the 48-split screen, non-detection areas seem white while the others display original camera pictures. When a motion is detected, the area will blink.

- Press SET to return to the MODE1 menu.

- As necessary, repeat to perform LEVEL adjustment and MASK setting by checking on the DISPLAY MODE screen.

- Notes:**
 - In systems other than Panasonic, select OFF for MOTION DET to prevent system devices from confusing time-code signal with alarm signal.
 - Set MASK SET over the areas where leaves or curtains etc. are swaying.
 - Adjust the detection level to prevent detection from confusing motion with noise under low light conditions.
 - It takes about 0.2 seconds for the alarm signal to reach the VCR's alarm terminal after detection.
 - The motion/scene change detection is not specifically intended to prevent theft or fire.

About MODE2 of Motion Detection

- The camera will detect a scene change in the following cases.
 - When the lens is fully sprayed or covered with a cloth, lid, or the like
 - When the camera direction is suddenly changed
- The camera will not detect a scene change in the following cases.
 - When a cloth with patterns covers the lens and it sways in the wind
 - When some portions in the screen are not veiled
 - When the screens are similar in scene patterns although the camera direction has changed
- The camera will faultily detect a scene change in the following cases.
 - When an obvious brightness change arises (ex. On/Off of the lamps)
 - When objects (ex. traffic in busy streets) that moved continuously in daytime no longer exist in a scene after dark
 - When a large object (ex. a truck) that occupies the full screen stays motionlessly in a scene

9. Digital Noise Reduction Setting (DNR)

Select a DNR mode suitable to the camera site conditions. The default setting is HIGH.

HIGH: Greatly reduces noise, though it produces afterimages when objects move.

LOW: Slightly reduces noise, and produces less afterimages.

10. Resolution Setting (RESOLUTION)

Select a horizontal resolution mode. The default setting is HIGH.

NORMAL: Resolves more than 480 TV lines.

HIGH: Resolves typically 540 TV lines, though noise may increase when SENSE UP is activated in low lighting conditions.

11 Black and White Mode Setting (BW MODE)

- Select BW MODE on the CAMERA SETUP menu and press SET.
→ The BW MODE menu opens.

- Select a mode for BW. The default setting is OFF.

AUTO1: Sets the mode to black-and-white if the picture is dark or to color if the picture is bright enough.

AUTO2: Functions the same as AUTO1, except this is applied to the use of a light source from a halogen lamp (wavelength ≥ 800nm).

EXT: Sets the mode to black-and-white if the sensor connected to the Day/Night IN terminal is activated.

ON: Sets the mode to black-and-white.

OFF: Sets the mode to color.


Note: There may be cases where AUTO1 or AUTO2 does not function well if the camera is aimed at subjects continuously moving or a scene filled with a single color such as a blue sky.

→ When AUTO1 or AUTO2 is selected, LEVEL and DURATION TIME appear.

- Select a threshold LEVEL to switch between the color and black-and-white mode. The default setting is HIGH.

HIGH: Switches the mode at around 5 lux illumination.

LOW: Switches the mode at around 1 lux illumination.

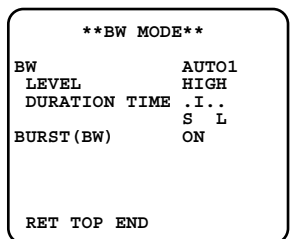

- Select a duration time to determine whether to switch the mode. The default setting is 30 seconds.

Available time: (Short) 10 s ↔ 30 s ↔ 60 s ↔ 300 s (Long)

- Select a burst signal mode. The default setting is ON.

ON: Supplies the (color) burst signal with black-and-white composite video.

OFF: Supplies no burst signal.

Note: Using ON is usually recommended. Try both ON and OFF to match to connected devices (recorders, monitors, etc.) that have different characteristics.

12. Privacy Zone Setting (PRIVACY ZONE)

Perform settings of up to eight privacy zones where you wish to veil the monitor screen.

- Select ON(1), ON(2) or OFF for PRIVACY ZONE on page 2 of the CAMERA SETUP menu and press SET. The default setting is OFF.

ON (1): Veils the zone with gray.

ON (2): Veils the zone with mosaic.

OFF: Displays pictures normally.

→ The ZONE NUMBER selection menu opens.

- Select a zone number on the top line using L/R buttons and press SET. The zone number followed by an asterisk * indicates that it has been already registered.

→ POSITION, SCALE, and a frame appear on the menu.

- Select →PUSH SW for POSITION and press SET.

→ Position selection becomes available.

- Select →PUSH SW for POSITION and press SET.

→ Position selection becomes available.

- Move the picture portion to be veiled to the center of the frame using the L/R/U/D buttons.

- Select →PUSH SW for SCALE and press SET.

→ Zone scale adjustment becomes available.

- Adjust the zone scale using the L/R/U/D buttons.

- To delete the settings, select DEL and press SET.

To apply the settings, move the cursor to SET and press SET.

→ The screen returns to the ZONE NUMBER selection menu.

13. Mirror Setting (MIRROR)

Specify whether to horizontally reverse the camera picture. The default setting is OFF.

OFF: Displays pictures normally.

ON: Displays pictures horizontally reversed.

14. Lens Drive Signal Selection (LENS-DRIVE)

Select the suitable drive type for the auto iris lens mounted. The default setting is DC.

DC: Is used for DC drive type lens.

VIDEO: Is used for video drive type lens.

15. Camera-shake Compensation (STABILIZER)

This function electronically compensates for shaking of the image that is liable to happen when the camera is mounted on a utility pole or the like or its image is optically magnified. The default setting is OFF.

ON: Compensates for shaking of the image.

OFF: Does not compensate for shaking.

- Notes:**
 - When set to ON, some effective pixels on the outskirts of the pickup device are assigned to the compensation function, it will result in a little lower resolution and narrower view angle. Adjust the image angle carefully after you set it to ON.
 - Compensation may not function when the image includes excessive amplitudes, high frequencies, flat contrast objects, or low light objects.

16. Back-focus Setting (BACK-FOCUS SETUP)

If applicable, perform adjustment of the lens focus as described in "Before Back-focus Adjustment" on the INSTALLATION page. Perform adjustment of the back focus (flange-back: the gap between the lens and focal plane) remotely on this menu using a system controller.

- Select BACK-FOCUS on the WV-CP480 TOP menu and press SET.

→ The BACK-FOCUS SETUP menu opens.

- Select ABF and press SET.

→ Adjustment is automatically performed.

- Select MANUAL-ADJ and press SET if manual adjustment is required.

The manual back-focus adjustment screen will open.

- Use the L/R buttons to move the "I" cursor and obtain a proper focus.
- Refer to the 4-digit number on the second bottom line. The larger the number is, the better the focus will be.

- Select RET and press SET to go back to the menu setup.

- Select a mode for C/L ↔ B/W. The default setting is AUTO.

AUTO: Adjusts the back-focus automatically every time the camera switches the mode between color and black-and-white.

PRESET: Adjusts the back-focus to the positions for color mode and black-and-white mode that are preset by performing step 2 (automatic) or step 3 (manual) under the respective light conditions.

FIX: Fixes the back-focus after adjustment.

- Select ON or OFF for SETUP-SW LOCK. The default setting is OFF.

OFF: Enables the SET button to open the back-focus adjustment screen while the camera picture is displayed.

ON: Disables the SET button from opening the back-focus adjustment screen.

- To reset the back focus to the default setting, press L and R simultaneously.

Notes:

- Select FIX or PRESET and adjust manually the back-focus when automatic adjustment is hindered by the following conditions.
 - Dirt or a water drip attached to window glass. This causes defocus on the object beyond the glass.
 - Objects in low lighting conditions
 - Objects emitting or reflecting extremely bright light
 - Flat contrast objects such as white wall or fire felt
 - Objects placed on the outskirts of the scene
 - More than one object placed with a certain depth
 - An object having a certain depth
 - Objects continuously moving such as busy streets
 - Objects extremely flickering
 - Objects consisting of parallel horizontal lines such as a window shade
- Matsushita Electric Industrial Co., Ltd shall not be responsible for any inconvenience, damage or loss caused by or attributed to inappropriate settings for the ABF function.


17. Special Menu (SPECIAL SETUP)

Select SPECIAL on the WV-CP480 TOP menu and press SET.

→ The SPECIAL SETUP menu opens.

17-1. Chroma Level Setting (CHROMA GAIN)

While observing the vectorscope or color video monitor, move the "I" cursor to adjust the chroma level.

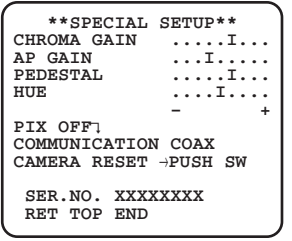

17-2. Aperture Gain Setting (AP GAIN)

While observing the waveform monitor or color video monitor, move the "I" cursor to adjust the aperture gain level.

17-3. Pedestal Level Setting (PEDestal)

While observing the waveform monitor or color video monitor, move the "I" cursor to adjust the pedestal level (black level).

17-4. Chroma Phase (Hue) Setting (HUE)

- Move the cursor to HUE.

While observing the vectorscope or color video monitor, move the "I" cursor to adjust the hue (chroma phase) level.

17-5. Pixel Compensation Setting (PIX OFF)

Perform settings to compensate a maximum of 16 blemish pixels on the pickup device.

- Select PIX OFF and press SET.

→ The PIX OFF menu opens with numbers from 1 to 16.

- Select a number and press SET.

→ The PIX OFF assignment screen opens with a + cursor.

- Move the cursor to the center of a blemish position until its appearance becomes less obvious. Finally, press SET.

→ The horizontal and vertical positions (coordinate) of the blemish will be displayed with a 6-digit number on the second bottom line.

→ The blemish position is registered to be compensated.

→ The screen returns to the PIX OFF menu that displays the number followed by an asterisk if it has been registered.

- Repeat above steps as necessary.

- To cancel a registration, select an asterisk number in the PIX OFF menu and press SET.

→ The PIX OFF assignment screen opens.

Hold down the L and R buttons simultaneously for 2 seconds.

→ The PIX OFF menu appears displaying the number without an asterisk if its registration has been cancelled.

17-6. Communication (COMMUNICATION)

Select a communication mode depending on whether the camera is connected with a Receiver (WV-RC100, WV-RC150). The default setting is COAX.

COAX: Is set when the camera is not connected with a Receiver.

COAX (RCV): Is set when the camera is connected with a Receiver.

17-7. To reset to the default settings (CAMERA RESET)

- Select CAMERA RESET.
- The PUSH SW is highlighted.
- While holding down L and R, press SET for 2 seconds or more.
- The camera will return to the default settings.

17-8. The serial number of the camera will be displayed.

SPECIFICATIONS

Pick-up device: 768 (H) x 494 (V) pixels, interline transfer CCD
Scanning area: 4.8 (H